

Tableau de conversion Pression - couple

Clé Hydraulique **HY 0.7 MXT**

Carré conducteur 3/4"



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	109
1200.....	84.....	131
1400.....	98.....	153
1600.....	110.....	171
1800.....	124.....	194
2000	138	217
2200.....	152.....	239
2400.....	165.....	261
2600.....	179.....	284
2800.....	193.....	306
3000	207	328
3200.....	220.....	351
3400.....	234.....	373
3600.....	248.....	296
3800.....	262.....	418
4000	276	441
4200.....	290.....	463
4400.....	303.....	486
4600.....	317.....	509
4800.....	331.....	532
5000	345	554
5200.....	358.....	577
5400.....	372.....	599
5600.....	386.....	621
5800.....	400.....	643
6000	414	666
6200.....	427.....	688
6400.....	441.....	711
6600.....	455.....	733
6800.....	468.....	756
7000	482	778
7200.....	496.....	801
7400.....	510.....	824
7600.....	524.....	847
7800.....	538.....	870
8000	552	893
8200.....	565.....	915
8400.....	579.....	936
8600.....	593.....	958
8800.....	607.....	979
9000	620	1000
9200.....	634.....	1023
9400.....	648.....	1046
9600.....	662.....	1069
9800.....	676.....	1092
10000	690	1114

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **HY 1 MXT** et **XLT**

Carré conducteur 3/4"



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	176
1200.....	84.....	214
1400.....	98.....	252
1600.....	110.....	290
1800.....	124.....	328
2000	138	366
2200.....	152.....	403
2400.....	165.....	439
2600.....	179.....	476
2800.....	193.....	512
3000	207	549
3200.....	220.....	584
3400.....	234.....	620
3600.....	248.....	655
3800.....	262.....	690
4000	276	725
4200.....	290.....	762
4400.....	303.....	798
4600.....	317.....	835
4800.....	331.....	872
5000	345	908
5200.....	358.....	945
5400.....	372.....	981
5600.....	386.....	1018
5800.....	400.....	1055
6000	414	1091
6200.....	427.....	1128
6400.....	441.....	1164
6600.....	455.....	1201
6800.....	468.....	1238
7000	482	1274
7200.....	496.....	1311
7400.....	510.....	1347
7600.....	524.....	1347
7800.....	538.....	1384
8000	552	1421
8200.....	565.....	1457
8400.....	579.....	1493
8600.....	593.....	1528
8800.....	607.....	1563
9000	620	1598
9200.....	634.....	1633
9400.....	648.....	1670
9600.....	662.....	1707
9800.....	676.....	1743
10000	690	1817

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **HY 3 MXT** et **XLT**

Carré conducteur 1''



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.
Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	434
1200.....	84.....	521
1400.....	98.....	607
1600.....	110.....	694
1800.....	124.....	781
2000	138	868
2200.....	152.....	954
2400.....	165.....	1041
2600.....	179.....	1128
2800.....	193.....	1215
3000	207	1301
3200.....	220.....	1388
3400.....	234.....	1475
3600.....	248.....	1562
3800.....	262.....	1648
4000	276	1735
4200.....	290.....	1825
4400.....	303.....	1914
4600.....	317.....	2004
4800.....	331.....	2093
5000	345	2183
5200.....	358.....	2269
5400.....	372.....	2356
5600.....	386.....	2443
5800.....	400.....	2530
6000	414	2616
6200.....	427.....	2703
6400.....	441.....	2790
6600.....	455.....	2877
6800.....	468.....	2963
7000	482	3050
7200.....	496.....	3140
7400.....	510.....	3229
7600.....	524.....	3319
7800.....	538.....	3408
8000	552	3497
8200.....	565.....	3587
8400.....	579.....	3676
8600.....	593.....	3766
8800.....	607.....	3855
9000	620	3945
9200.....	634.....	4032
9400.....	648.....	4118
9600.....	662.....	4205
9800.....	676.....	4292
10000	690	4379

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **HY 5 MXT** et **XLT**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	753
1200.....	84.....	829
1400.....	98.....	1056
1600.....	110.....	1206
1800.....	124.....	1356
2000	138	1505
2200.....	152.....	1657
2400.....	165.....	1808
2600.....	179.....	1960
2800.....	193.....	2112
3000	207	2264
3200.....	220.....	2416
3400.....	234.....	2568
3600.....	248.....	2719
3800.....	262.....	2817
4000	276	3023
4200.....	290.....	3175
4400.....	303.....	3327
4600.....	317.....	3478
4800.....	331.....	3630
5000	345	3782
5200.....	358.....	3934
5400.....	372.....	4086
5600.....	386.....	4238
5800.....	400.....	4389
6000	414	4541
6200.....	427.....	4693
6400.....	441.....	4845
6600.....	455.....	4997
6800.....	468.....	5149
7000	482	5300
7200.....	496.....	5452
7400.....	510.....	5604
7600.....	524.....	5756
7800.....	538.....	5908
8000	552	6060
8200.....	565.....	6211
8400.....	579.....	6363
8600.....	593.....	6515
8800.....	607.....	6667
9000	620	6819
9200.....	634.....	6970
9400.....	648.....	7122
9600.....	662.....	7274
9800.....	676.....	7426
10000	690	7578

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **HY 8 XLT**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.

Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	1085
1200.....	84.....	1302
1400.....	98.....	1410
1600.....	110.....	1735
1800.....	124.....	1952
2000	138	2169
2200.....	152.....	2386
2400.....	165.....	2603
2600.....	179.....	2820
2800.....	193.....	3037
3000	207	3253
3200.....	220.....	3470
3400.....	234.....	3687
3600.....	248.....	3904
3800.....	262.....	4121
4000	276	4338
4200.....	290.....	4555
4400.....	303.....	4772
4600.....	317.....	4989
4800.....	331.....	5205
5000	345	5422
5200.....	358.....	5639
5400.....	372.....	5856
5600.....	386.....	6073
5800.....	400.....	6290
6000	414	6507
6200.....	427.....	6724
6400.....	441.....	6941
6600.....	455.....	7158
6800.....	468.....	7374
7000	482	7591
7200.....	496.....	7808
7400.....	510.....	8025
7600.....	524.....	8242
7800.....	538.....	8459
8000	552	8676
8200.....	565.....	8893
8400.....	579.....	9110
8600.....	593.....	9327
8800.....	607.....	9543
9000	620	9760
9200.....	634.....	9977
9400.....	648.....	10194
9600.....	662.....	10411
9800.....	676.....	10628
10000	690	10845

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **HY 10 MXT** et **XLT**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.

Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	1560
1200.....	84.....	1866
1400.....	98.....	2172
1600.....	110.....	2727
1800.....	124.....	2822
2000	138	3118
2200.....	152.....	3424
2400.....	165.....	3731
2600.....	179.....	4037
2800.....	193.....	4343
3000	207	4650
3200.....	220.....	4956
3400.....	234.....	5262
3600.....	248.....	5569
3800.....	262.....	5875
4000	276	6182
4200.....	290.....	6496
4400.....	303.....	6811
4600.....	317.....	7125
4800.....	331.....	7440
5000	345	7754
5200.....	358.....	8063
5400.....	372.....	8372
5600.....	386.....	8681
5800.....	400.....	8990
6000	414	9299
6200.....	427.....	9617
6400.....	441.....	9934
6600.....	455.....	10251
6800.....	468.....	10568
7000	482	10885
7200.....	496.....	11203
7400.....	510.....	11520
7600.....	524.....	11837
7800.....	538.....	12154
8000	552	12472
8200.....	565.....	12786
8400.....	579.....	13101
8600.....	593.....	13415
8800.....	607.....	13730
9000	620	14044
9200.....	634.....	14359
9400.....	648.....	14673
9600.....	662.....	14988
9800.....	676.....	15302
10000	690	15617

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **HY 20 MXT** et **XLT**

Carré conducteur 2" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.
Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	2678
1200	84	3213
1400	98	3749
1600	110	4284
1800	124	4820
2000	138	5355
2200	152	5890
2400	165	6426
2600	179	6961
2800	193	7496
3000	207	8039
3200	220	8574
3400	234	9110
3600	248	9645
3800	262	10181
4000	276	10710
4200	290	11251
4400	303	11787
4600	317	12322
4800	331	12858
5000	345	13393
5200	358	13929
5400	372	14464
5600	386	15000
5800	400	15535
6000	414	16077
6200	427	16666
6400	441	17142
6600	455	17677
6800	468	18212
7000	482	18748
7200	496	19283
7400	510	19819
7600	524	20361
7800	538	20897
8000	552	21432
8200	565	21961
8400	579	22503
8600	593	23038
8800	607	23574
9000	620	24109
9200	634	24645
9400	648	25180
9600	662	25716
9800	676	26251
10000	690	26787

Tableau de conversion Pression - couple

Clé Hydraulique **HY 25 XLT**

Carré conducteur 2" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	3592
1200	84	4273
1400	98	4953
1600	110	5634
1800	124	6314
2000	138	6995
2200	152	7684
2400	165	8372
2600	179	9061
2800	193	9749
3000	207	10438
3200	220	11124
3400	234	11810
3600	248	12496
3800	262	13182
4000	276	13868
4200	290	14554
4400	303	15229
4600	317	15909
4800	331	16590
5000	345	17270
5200	358	17970
5400	372	18669
5600	386	19369
5800	400	20068
6000	414	20768
6200	427	21443
6400	441	22118
6600	455	22793
6800	468	23468
7000	482	24143
7200	496	24840
7400	510	25537
7600	524	26234
7800	538	26930
8000	552	27627
8200	565	28324
8400	579	29021
8600	593	29717
8800	607	30414
9000	620	31111
9200	634	31811
9400	648	32510
9600	662	33209
9800	676	33909
10000	690	34608

Tableau de conversion Pression - couple

Clé Hydraulique **HY 35 MXT**

Carré conducteur 2" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	4891
1200	84	5869
1400	98	6846
1600	110	7825
1800	124	8833
2000	138	9842
2200	152	10873
2400	165	11905
2600	179	12936
2800	193	13968
3000	207	15000
3200	220	16019
3400	234	17039
3600	248	18058
3800	262	19077
4000	276	20097
4200	290	21109
4400	303	22122
4600	317	23135
4800	331	24147
5000	345	25160
5200	358	26171
5400	372	27182
5600	386	28194
5800	400	29205
6000	414	30216
6200	427	31215
6400	441	32214
6600	455	33214
6800	468	34213
7000	482	35212
7200	496	36216
7400	510	37221
7600	524	38225
7800	538	39230
8000	552	40234
8200	565	41240
8400	579	42246
8600	593	43252
8800	607	44258
9000	620	45263
9200	634	46269
9400	648	47275
9600	662	48281
9800	676	49287
10000	690	50293

Tableau de conversion Pression - couple

Clé Hydraulique **HY 50 XLT**

Carré conducteur 2" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.
Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	7116
1200	84	8540
1400	98	9964
1600	110	11387
1800	124	12810
2000	138	14234
2200	152	15657
2400	165	17081
2600	179	18504
2800	193	19927
3000	207	21351
3200	220	22774
3400	234	24197
3600	248	25621
3800	262	27044
4000	276	28468
4200	290	29891
4400	303	31314
4600	317	32738
4800	331	34161
5000	345	35585
5200	358	37008
5400	372	38431
5600	386	39855
5800	400	41278
6000	414	42701
6200	427	44125
6400	441	45548
6600	455	46972
6800	468	48385
7000	482	49818
7200	496	51242
7400	510	52665
7600	524	54088
7800	538	55512
8000	552	56935
8200	565	58359
8400	579	59782
8600	593	61205
8800	607	62629
9000	620	64052
9200	634	65475
9400	648	66899
9600	662	68322
9800	676	69746
10000	690	71169