

Tableau de conversion Pression - couple

Clé Hydraulique **SQV P.6**

Carré conducteur 3/4"



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	96
1200	84	116
1400	98	135
1600	110	153
1800	124	173
2000	138	192
2200	152	212
2400	165	231
2600	179	250
2800	193	269
3000	207	289
3200	220	308
3400	234	327
3600	248	346
3800	262	366
4000	276	385
4200	290	404
4400	303	423
4600	317	443
4800	331	462
5000	345	481
5200	358	500
5400	372	520
5600	386	539
5800	400	558
6000	414	577
6200	427	597
6400	441	616
6600	455	635
6800	468	654
7000	482	674
7200	496	693
7400	510	712
7600	524	731
7800	538	751
8000	552	770
8200	565	789
8400	579	808
8600	593	828
8800	607	847
9000	620	866
9200	634	885
9400	648	905
9600	662	924
9800	676	943
10000	690	962

Tableau de conversion Pression - couple

Clé Hydraulique **SQV 2**

Carré conducteur 3/4"



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	156
1200	84	187
1400	98	219
1600	110	252
1800	124	282
2000	138	312
2200	152	343
2400	165	374
2600	179	405
2800	193	437
3000	207	468
3200	220	499
3400	234	530
3600	248	561
3800	262	592
4000	276	624
4200	290	655
4400	303	686
4600	317	717
4800	331	748
5000	345	779
5200	358	811
5400	372	842
5600	386	873
5800	400	904
6000	414	935
6200	427	967
6400	441	998
6600	455	1029
6800	468	1060
7000	482	1091
7200	496	1122
7400	510	1154
7600	524	1185
7800	538	1216
8000	552	1247
8200	565	1278
8400	579	1310
8600	593	1341
8800	607	1372
9000	620	1403
9200	634	1434
9400	648	1465
9600	662	1497
9800	676	1528
10000	690	1559

Tableau de conversion Pression - couple

Clé Hydraulique **SQV 4**

Carré conducteur 1''



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	410
1200	84	492
1400	98	573
1600	110	657
1800	124	739
2000	138	820
2200	152	901
2400	165	983
2600	179	1064
2800	193	1145
3000	207	1227
3200	220	1308
3400	234	1389
3600	248	1471
3800	262	1552
4000	276	1633
4200	290	1715
4400	303	1796
4600	317	1878
4800	331	1959
5000	345	2040
5200	358	2122
5400	372	2203
5600	386	2284
5800	400	2366
6000	414	2447
6200	427	2528
6400	441	2610
6600	455	2691
6800	468	2772
7000	482	2854
7200	496	2935
7400	510	3016
7600	524	3098
7800	538	3179
8000	552	3260
8200	565	3342
8400	579	3423
8600	593	3504
8800	607	3586
9000	620	3667
9200	634	3751
9400	648	3835
9600	662	3919
9800	676	4003
10000	690	4087

Tableau de conversion Pression - couple

Clé Hydraulique **SQV 8**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.

Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	1254
1200.....	84.....	1505
1400.....	98.....	1756
1600.....	110.....	2007
1800.....	124.....	2257
2000	138	2508
2200.....	152.....	2759
2400.....	165.....	3010
2600.....	179.....	3261
2800.....	193.....	3512
3000	207	3763
3200.....	220.....	4014
3400.....	234.....	4265
3600.....	248.....	4516
3800.....	262.....	4766
4000	276	5017
4200.....	290.....	5268
4400.....	303.....	5519
4600.....	317.....	5769
4800.....	331.....	6020
5000	345	6271
5200.....	358.....	6522
5400.....	372.....	6773
5600.....	386.....	7023
5800.....	400.....	7274
6000	414	7525
6200.....	427.....	7776
6400.....	441.....	8027
6600.....	455.....	8277
6800.....	468.....	8528
7000	482	8779
7200.....	496.....	9030
7400.....	510.....	9281
7600.....	524.....	9532
7800.....	538.....	9783
8000	552	10034
8200.....	565.....	10285
8400.....	579.....	10536
8600.....	593.....	10787
8800.....	607.....	11037
9000	620	11288
9200.....	634.....	11539
9400.....	648.....	11790
9600.....	662.....	12040
9800.....	676.....	12291
10000	690	12542

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **SQV 12**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.

Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	1491
1200	84	1790
1400	98	2088
1600	110	2386
1800	124	2684
2000	138	2982
2200	152	3281
2400	165	3579
2600	179	3877
2800	193	4175
3000	207	4473
3200	220	4772
3400	234	5070
3600	248	5368
3800	262	5666
4000	276	5965
4200	290	6263
4400	303	6561
4600	317	6859
4800	331	7158
5000	345	7456
5200	358	7754
5400	372	8052
5600	386	8350
5800	400	8649
6000	414	8947
6200	427	9245
6400	441	9543
6600	455	9842
6800	468	10140
7000	482	10438
7200	496	10736
7400	510	11035
7600	524	11333
7800	538	11631
8000	552	11929
8200	565	12228
8400	579	12526
8600	593	12824
8800	607	13122
9000	620	13420
9200	634	13719
9400	648	14017
9600	662	14315
9800	676	14613
10000	690	14912

Tableau de conversion Pression - couple

Clé Hydraulique **SQV 30**

Carré conducteur 2" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.

Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression		Couple
PSI	Bars	Newton mètre
1000	70	4020
1200	84	4823
1400	98	5627
1600	110	6431
1800	124	7235
2000	138	8039
2200	152	8843
2400	165	9646
2600	179	10450
2800	193	11254
3000	207	12058
3200	220	12862
3400	234	13666
3600	248	14470
3800	262	15274
4000	276	16077
4200	290	16881
4400	303	17685
4600	317	18489
4800	331	19293
5000	345	20097
5200	358	20901
5400	372	21705
5600	386	22508
5800	400	23312
6000	414	24116
6200	427	24920
6400	441	25724
6600	455	26528
6800	468	27332
7000	482	28135
7200	496	28939
7400	510	29743
7600	524	30547
7800	538	31351
8000	552	32155
8200	565	32959
8400	579	33763
8600	593	34566
8800	607	35370
9000	620	36174
9200	634	36978
9400	648	37782
9600	662	38586
9800	676	39390
10000	690	40194